


Pavers Installation Sheet

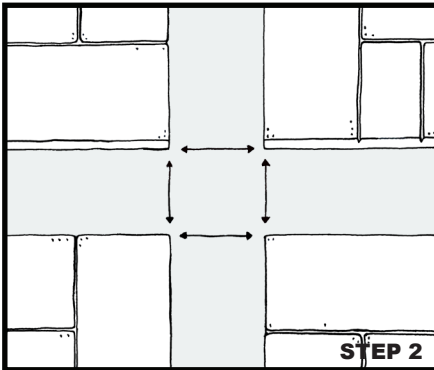

STEP 1


Pull all the Pavers out of the package and look for the different paver configurations. Start laying out the pattern prior to commencing.

STEP 2 (refer to diagram)

Align the corners to the center similar to installing tile and use a "Nickel" between all sides as your spacer allows for the "Quick Setting Sand" to fill in between all sides of the pavers. The spacing step of the installation process is done in Step 5.

STEP 3 (refer to diagram)

Mix "Polymer Thin-set" and apply the pavers to your clean substrate. Start in the corner of your project and work outward. Use a 1/2" "notch trowel" for spreading the "Polymer Thin-set" to the substrate and push Paver firmly into the mortar bed of Thin-Set.

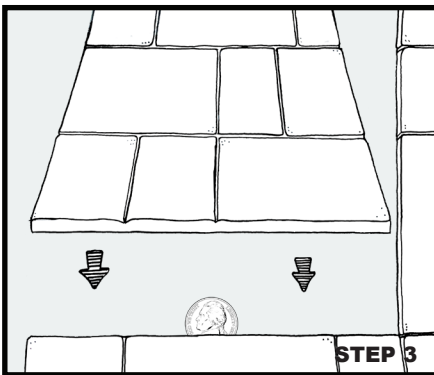

TIP - SPACING

For spacing use a "Nickel" on all sides of the square paver to allow for "Quick Setting Sand" to be added after the Pavers are set into the "Polymer Thin-set".

TIP - CUTTING

Cut Pavers as required with a 4" carbon to diamond blade rotary saw or grinder.

STEP 4

Clean surface prior to adding "Quick Setting Sand" with a soft bristle brush or sponge using soap and water in insure a clean surface if any Thin-set gets on the surface.

STEP 5


Add the "Quick Setting Sand" between all the paver spaces to achieve the Paver Sanded Grout Look.

STEP 6

Clean entire surface with a soft bristle brush or sponge using soap and water in insure a clean final surface.

STEP 7

Sealing is not mandatory but optional if a shine look is desired.

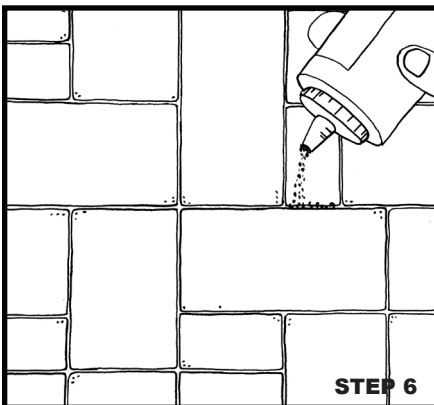

Please visit www.slimsurface.com for our full installation video.

ELEMENTS
ARCHITECTURAL SURFACES